


Stereo Power Amplifier - HTM-100UT

Option:
USB+FM Tuner
AM/FM Tuner
USB

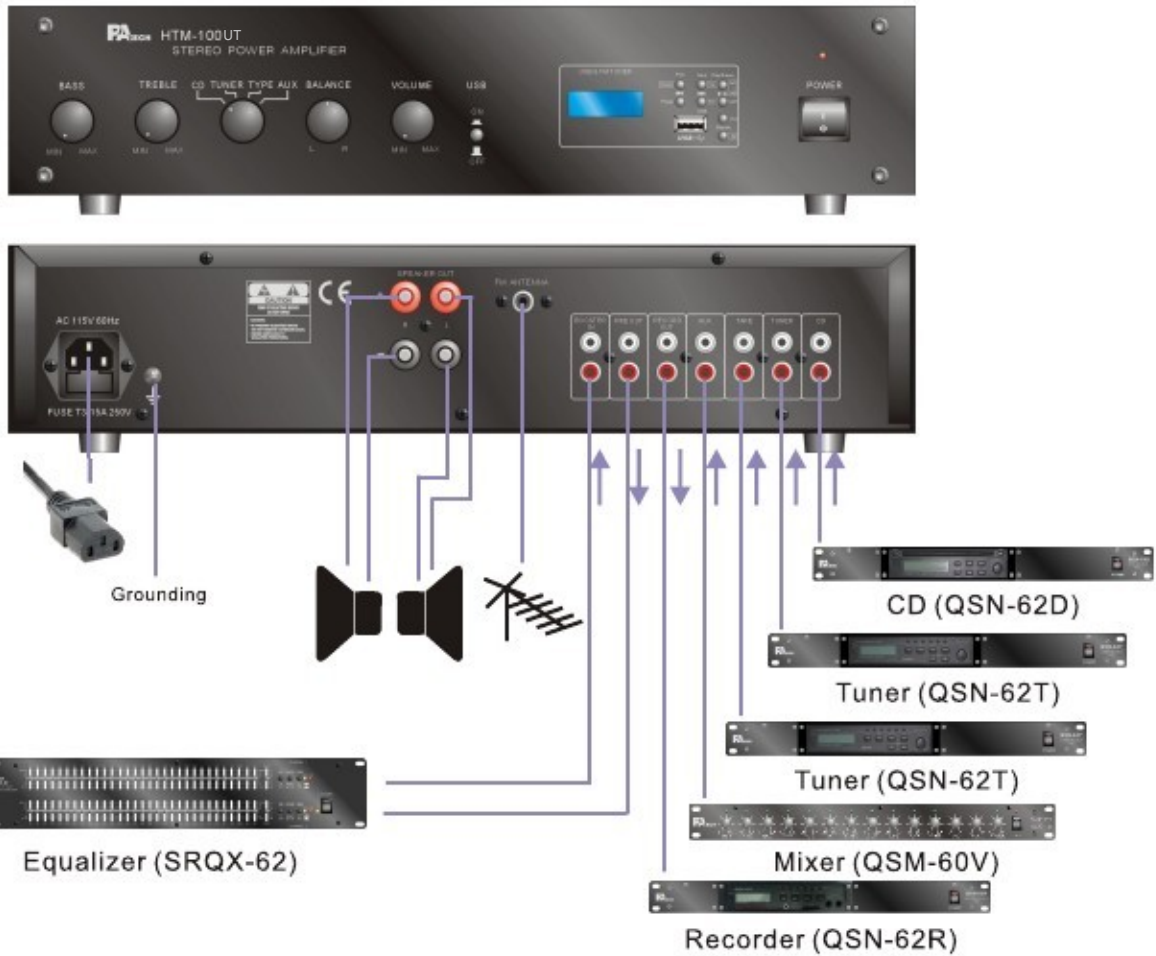

Model	HTM-100 UT
Power Output	100W x 2 RMS
Power Supply	AC 115 or 230V 50/60Hz
Total Harmonic Distortion	≤ 0.05 % @ 1 KHz
Sensitivity	RCA JACK (UNBALANCED) CD 200 mV @ 20KΩ TUNER 200mV @ 20KΩ TAPE 200mV @ 20KΩ AUX 200mV @ 20KΩ RECORD OUT, PRE OUT @ 1V
Frequency Response	50Hz ~ 20KHz ±3dB
Output	8Ω BINDING POST
Signal to Noise Ratio	>70 dB
Damping Factor	>200
Tone	BASS 100Hz ± 10dB TREBLE 10KHz ± 10dB
Protection	SPEAKER SHORT TEMPERATURE OVERLOAD
AC Power Consumption	300W
Dimension	88(H) x 425(W) x 305mm(D)
Weight	8 KGS
Mounting	FREE STANDING OR 19" RACK

Features:

- Standard 19" rack model
- 2 channels (Stereo)
- 4 inputs : CD, Tuner, Tape, AUX
- Front input level control
- Front input selection switch CD/Tuner/Tape/AUX
- Over temperature, over load, and speaker short protection
- Booster input
- Master volume, Balance, Bass, and Treble control
- Pre - out + Record output
- 2U height

Source Unit : SU-UT

USB 隨身碟播放機+FM 收音機



本機內部 同業 A 同業 B

USB 模式:

- 開啓電源: 按下 "Power" 鍵.
- 模式選擇: 按下 "USB" 鍵.
- 歌曲播放與暫停: 按下 "Play/Pause" 鍵.
- 歌曲停止: 按下 "Play/Pause" 鍵保持 3 秒.
- 下一首歌: 按下 "Next" 鍵.
- 上一首歌: 按下 "Prev" 鍵.
- 快轉前進: 按下 "Next" 鍵保持.
- 快轉後退: 按下 "Prev" 鍵保持.
- 音量調大: 按下 "Vol+" 鍵.
- 音量調小: 按下 "Vol-" 鍵.
- 歌曲時間與曲目顯示切換: 按下 "Display" 鍵.

FM 模式:

- 開啓電源: 按下 "Power" 鍵.
- 模式選擇: 按下 "FM" 鍵.
- 選擇已記憶的電台 1~5: 按下 "M1~M5" 鍵.
- 往上調整頻率: 按下 "Up" 鍵.
- 往下調整頻率: 按下 "Down" 鍵.
- 往上搜尋頻道: 按下 "Up" 鍵保持 3 秒.
- 往下搜尋頻道: 按下 "Down" 鍵保持 3 秒.
- 音量調大: 按下 "Vol+" 鍵.
- 音量調小: 按下 "Vol-" 鍵.
- 記憶目前的電台 1~5: 按下 "M" 鍵.

Power Supply	DC 12V
Format	WMA, MP3
Tuning Range	FM 87.5 ~ 108.5 MHz
ANT Input	75 ohm
Total Harmonic Distortion	<= 1 %
Sensitivity	RCA JACK (Unbalance)@ 10Kohm
Frequency Response	20Hz ~ 20KHz +/-1dB
Output	100mV
Signal To Noise Ratio	80dB
DC Power Consumption	0.1A @ Rated Power
Dimension	40(H) x 100(W) x 140mm(D)
Weight	0.3 KGS